


# Slugbuster® III

## Coin Installation

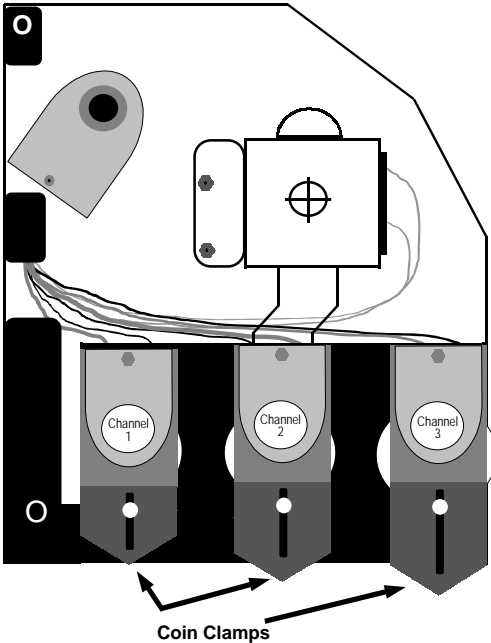

### To Install Sample Coins:

1. Place the unit with sample coin holders facing up.
2. Loosen the three thumb screws that secure the coin clamps.  
*Note: The solid-state technology of Slugbuster III requires sample coins to function properly, specifically quarter and dollar coins. You must insert a different sample coin in each of the three channels, whether you accept them or not.*
3. Insert 3 sample coins from the rear, right side of the unit. Use each consecutive coin to push the next coin over, until the first coin is in the left coin holder.
4. Line up each coin with the coin clamp and firmly push the clamps up into the coils to seat the coins in proper position.
5. Recommended installation of sample coins:  
Channel 1 – Quarter    Channel 2 – Token    Channel 3 – Dollar coin


Your Slugbuster is now ready to install and program.

**Do not tamper with screws or nuts covered with blue sealer.**

These are factory-set adjustments and tampering with them voids your warranty.

\* Maximum token size for use in the United States is 1.125"


\* **Not all coins are compatible with Slugbuster III.**  
Please contact us for details at 800-752-0762

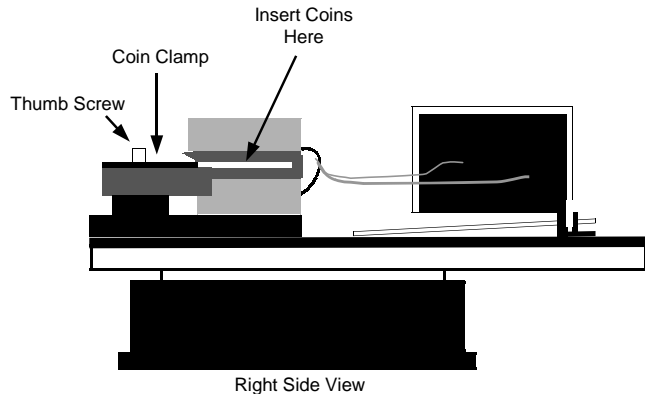

## Hook-up and Wiring

### Color-coded power cords make hook-up easy

 Single or Dual  
Coin/Token



**Blue Wire:** 8-volt DC out-going pulse for timer coin switch; provides direct hook-up for most timers (please call for compatibility details)

**Yellow Wire:** "Hot" 24-volt AC supply to Slugbuster

**Black Wire:** Common/ground 24-volt AC supply to Slugbuster

**Purple Wire:** 24-volt AC out-going pulse for optional coin counter

Please contact us with any questions

**Parker Engineering & Manufacturing**  
[www.slugbuster.com](http://www.slugbuster.com)  
Phone: 616-784-6500 or 800-752-0762

11 North Park Street NE, Grand Rapids MI 49544  
Email: [info@slugbuster.com](mailto:info@slugbuster.com)  
Fax: 616-784-6501

## Programming

### To Program Your Slugbuster III:

1. **First, set the value of the smallest coin to be accepted.** Push and hold the 'Program' button until the display reads **A .25**. Push the 'advance' or 'decrease' button to change the coin value. Ex: If a quarter is the smallest coin you will accept, set the value to 'A .25'.
2. **Next, set the value of coin Channel 1.** Push the 'Program' button one time, so the display reads **b .25**. Use the 'advance' or 'decrease' button to change the coin value. The value will be changed in increments according to the smallest coin accepted, as set in step 1.
3. **Set the value of coin Channel 2.** Push the 'Program' button one time, so the display reads **C 2.00**. Use the 'advance' or 'decrease' button to change the coin value for Channel 2. The value will be changed in increments according to the smallest coin accepted, as set in step 1.
4. **Set the value of coin Channel 3.** Push the 'Program' button once again, so the display reads **d 1.00**. Use the 'advance' or 'decrease' button to change the value for Channel 3. The value will be changed in increments according to the smallest coin accepted, as set in step 1.
5. Push and hold the 'Program' button until a flashing dot appears in the lower center of the display. Your Slugbuster is now ready to accept coins.

### Viewing and Resetting Audit Channels

To review the audit channels, press and hold the 'Program' button until the display reads A .25, as in step 1 above. Continue pushing the 'Program' button and cycle through the display, past d 1.00.

- The display will then flash CH-1 and read the number of coins accepted on Channel 1.
- Push 'Program' once more and the display will flash CH-2 and read the number of coins accepted on Channel 2.
- Push 'Program' again and the display will flash CH-3 and read the number of coins accepted on Channel 3.

To reset the audit channels, press and hold the 'advance/delete' button until the display reads zero while viewing each channel's audit as described above.

## Turning a Channel Off / Adjusting Sensitivity

### Turning a Channel Off

During programming, press the 'advance/delete' button until the display reads OFF for the desired channel. The unit will now reject the coin; however, you must leave the sample coin in the unit.


**DO NOT use the sensitivity adjustment to turn a channel off. Sensitivity potentiometers should only be adjusted as a last resort for acceptance problems.**

Slugbuster must have sample coins installed in all three Channels, whether or not they are to be accepted. Do not use the same sample coin in more than one Channel.

Channel 1 – Quarter      Channel 2 – Token or Nickel      Channel 3 – Dollar coin (Susan B. Anthony or Golden Dollar)


### Adjusting Sensitivity

Sensitivity adjustment potentiometers (pots) are factory set for use with US Quarters, 85/15 Tokens and US Dollar Coins. If it is necessary to adjust pots:

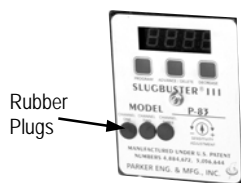

1. Remove the rubber plug for the desired channel
2. Using a small plastic stylus, turn the pot.  
The safe range for adjustment is between '10 and 2 o'clock'  
Do not adjust the pot beyond these ranges to avoid credit and acceptance problems.
3. Replace the rubber plug.

If the unit is accepting incorrect coins, turn the pot counter-clockwise on the channel being credited.  
If the unit is rejecting good coins, turn the pot clockwise for the channel not accepting coins.

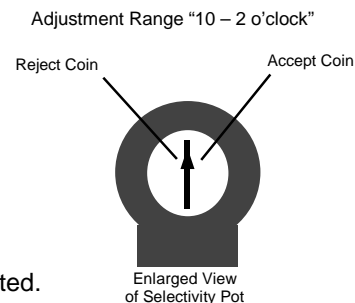

## Cleaning Your Slugbuster

Clean your Slugbuster with a soft cloth and warm water. DO NOT use oil or other corrosive liquids.

**Please contact us with any questions**

**Parker Engineering & Manufacturing**  
[www.slugbuster.com](http://www.slugbuster.com)  
Phone: 616-784-6500 or 800-752-0762

11 North Park Street NE, Grand Rapids MI 49544  
Email: [info@slugbuster.com](mailto:info@slugbuster.com)  
Fax: 616-784-6501

Rev 2/05

Page 2 of 2